


BZ2	DC12V Buzzer
R1-3	Support Relay
TC2OUT	Temperature Controller Output
DRSW	Door Switch
Pt2	Temperature Sensor (Pt100Ω)
TC2	Temperature Controller
SV5	Solenoid Valve
SV3SW	Solenoid Valve Switch
TH2	Thermostat
PB	Push Button(BAT CHECK)
BZ-1	Buzzer Switch(AL-1)
BAT-1	Battery(DC12V)
CHG-1	Battery Charger
SYMBOL	DESCRIPTION

If the Auto Back-up System is installed(LN2)	
R1	Support Relay
RSW	Switch Remote Control
TP	Terminal,Output Signal
SYMBOL	DESCRIPTION
Remote	
ThSW1-2	Thermo Switch(50VA)
Tr	Transformer(220V ⇒ 100V)
SV1-4	Solenoid Valve
PSM1-2	Pressure Control Switch
RL	Error Lamp(AL2)
T1-3	Freezer Delay Timer
COMP1-2	Compressor(Ø3 220V)
TH1-2	Thermal Relay
F1sb,F2sb	Support Fan Motor
F1-2	Fan Motor
CS	Power Outlet
R1-5	Support Relay
MgT-2	Magnet Relay
Pt1	Temperature Sensor (Pt100Ω)
PSW	Power Switch
SYMBOL	DESCRIPTION
MAIN	

**REMOTE**  
(Remote Switch)

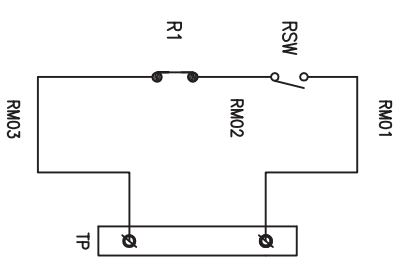

**If the Auto Back-up System is Installed (LN2)**

